


## **Key to materials:** Visqueen Ultimate GeoSeal **Visqueen Ultimate Retaining Discs** 2 at 400mm centres Visqueen IGW10 Waterstop bedded in Visqueen Waterstop Adhesive **Visqueen IGW Watertight Concrete Visqueen Gas Resistant Self Adhesive Membrane on Visqueen HP Tanking Primer** Visqueen Axiom UniSeal fillet, 35mm x 35mm Visqueen Protect&Drain, 12mm Maintainable land drain by others

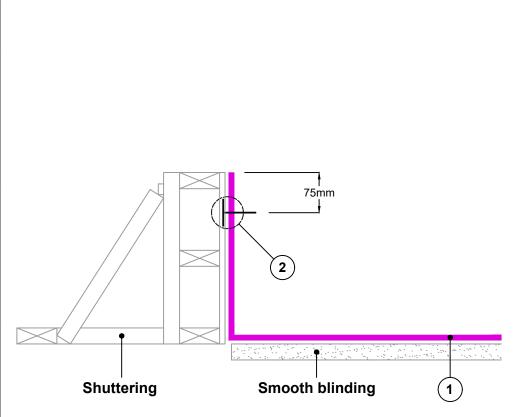

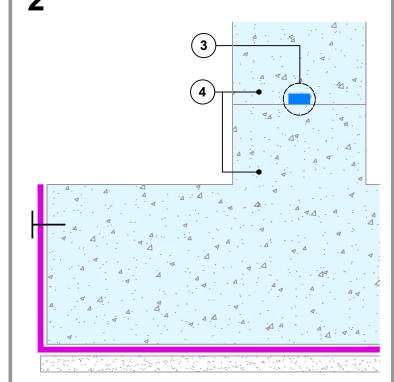

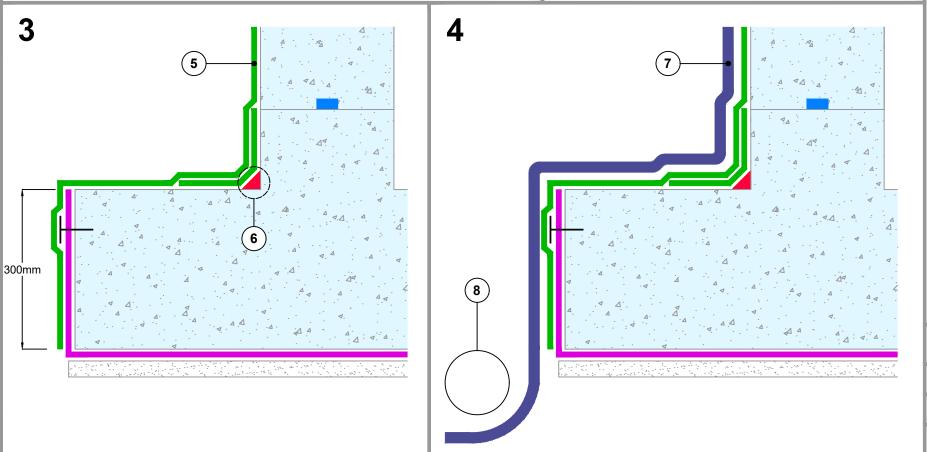

## **CRITICAL GUIDANCE NOTES**

Visqueen Guidance Details are for illustration purposes only. It is the lead designer's responsibility to ensure Guidance Details are incorporated correctly into construction

Visqueen take no project design liability, or responsibility for the use of Guidance Details. Visqueen have no control over the situation in which the products are installed. Visqueen provide a Contract Design Service where project specific drawings can be produced. Contact Visqueen Technical Services for further information.

Site construction sequencing should be assessed before the appropriate Guidance Detail is selected and approved by the lead

All Visqueen materials must be installed in strict accordance with the Visqueen Product Datasheets and applicable third party certificates.

Radon protection in accordance with national building regulations and BR211:2023.

Further protection such as ventilation measures (not shown) may be necessary to meet the requirements of BS8485:2015+A1:2019.

Drawing not to scale, use figured dimensions only. All figured dimensions are in millimetres.

## **Guidance Detail**

Date: October 2023

**Drawing No: SW-GRSAM-01** 

Revision:

Drawn by: JR

Approved by: SD



**CONCRETE TOE WATERPROOFING** STEP BY STEP INSTALLATION



Tel: 0333 202 6800 enquiries@visqueen.com www.visqueen.com

© Copyright reserved. This drawing may not be reproduced or amended without prior written permission.